General instructions

Please read these safety instructions before using your device and store them for possible future reference.

- **1.** Do not attempt to remove any screws, or open the cover of the unit; there are no user serviceable parts inside, refer all servicing to qualified service personnel.
- 2. The power supply must be replaced by a new one in case of malfunction, because this power supply is not repairable.
- 3. The socket outlet shall be installed near the equipment and shall be easily accessible.
- 4. The product is not intended for use by persons (including children) with reduced physical, sensory or mental capacity. Persons who have not read the manual, unless they have received explanations by a person responsible for their safety and supervision, should not use this unit.
- 5. Children should be monitored to ensure that they do not play unattented with the product.
- **6.** The cord should always be easily accessible.
- 7. The device should not be exposed to dripping or splashing of water or liquids and no objects filled with liquids, e.g.flower vases, should be placed on the product.
- 8. The normal ventilation of the product shall not be impended for intended
- 9. It is recommended to leave a minimum distance of 10 cm around the unit to ensure sufficient ventilation.
- 10. Open flame sources, such as candles, should not be placed on top of the device.
- 11. The device is intended for use only in a temperate climate.
- **12.** CAUTION:
- Danger of explosion if battery is incorrectly replaced or not replaced by the same type or equivalent.
- 13. The battery should not be exposed to excessive heat such as sunshine,
- 14. Different types of batteries, new and used batteries should not be mixed.
- **15.** The battery must be installed according to the polarity.
- **16.** If the battery is worn, it must be removed from the product.
- **17.** The battery must be disposed of safely. Always use the collection bins provided for recycled items in order to protect the environment.

WARNING

- 1. The **lightning flash** with the arrowhead symbol within an equilateral triangle alerts the user to the presence of un-insulated dangerous voltage within the product's enclosure that could cause electric shock.
- 2. The **exclamation mark** within an equilateral triangle alerts the user to the presence of important operating and maintenance instructions as well as warnings in the user's manual or on the product.



CLASS 1 LASER PRODUCT LABEL

This label is attached to the place as illustrated to inform that this device contains a laser component.

	CLASS 1	LASER PRODUCT
	CLASSE 1	LASER PRODUTO
	KLASS 1	LASER APPARAT
	KLASSE 1	LASER PRODUKT
	CLASSE 1	PRODUIT LASER
\		



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Please contact your local

retailer. The recycling of materials will help to conserve natural resources.

DECLARATION OF CONFORMITY

Radio equipment and telecommunications terminal equipment, Directive 2014/53/EU

We, Crystal Audio, hereby declare that the product, HBT mini HiFi stereo soundsystem, is in conformity with provisions of the Directive 2014/53/EU. The complete text of the Declaration of conformity can be found on the following webpage: www.CrystalAudio.gr









Designed in Europe by Crystal Audio Other trademarks and trade names are those of their respective owners

CRYSTALAUDIO

- Quick Guide -

Thank you for purchasing the HBT mini HiFi system

This mini Hi-Fi system delivers loud sound and deep bass.

TECHNICAL SPECIFICATIONS:

Power Output (RMS): 30W (2x 15W) Max. Power Output: 40W

Woofer: **2x 4"**

Freq. Response: 40Hz - 20KHz

Impedance: 4Ω

S/N: **80dB** FM Frequency Range: 87.5 - 108MHz

MP3/WMA Bit Rate: 32-320Kbps (MP3)

40-320Kbps (WMA)

Rated Voltage: **AC 110-240V, 50/60Hz**

Power Consumption: 20W Dimensions (Main Unit): 150x230x195mm

Dimensions (Speakers): 130x229x155mm (each)

CONNECTIVITY FEATURES:

- Bluetooth® v5.0
- USB 2.0 port
- ✓ up to 32Gb, FAT16/32 file system
- AUX In
- HEADPHONES

OTHER FEATURES:

- CD/CD-R/CD-RW/MP3
- FM Radio
- LED Display

IN THE BOX:

- HBT HiFi system
- Remote Control
- User Manual
- Warranty



www.CrystalAudio.gr



D & J DAMKALIDIS SA

Set up

1. Connect the speakers to the unit:


- Connect each speaker to the respective terminal.
- Speakers with 2-colour cable: black and red.
 Connect red cable into the red terminal (indicated as +),
 Connect black cable into the black terminal (indicated as -).

2. Connect the unit to the outlet:

• Connect the mains plug into the electrical outlet.

3. Battery Installation:


Slide out cover and place 2 AAA type batteries (not inluded) with polarities as shown below.

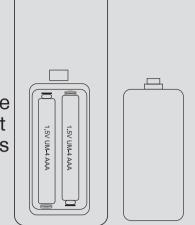

Wireless Connection

You can pair HBT with any Bluetooth® enabled device (phone, tablet etc).


1. Press **SOURCE** button on the Remote Control or Main Unit **and select BLUETOOTH mode** (bt indication on LED display).

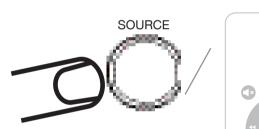






 2. On your device, turn BLUETOOTH on and make it discoverable. Search for CRYSTAL AUDIO HBT and select it.




* The device will automatically connect to the last paired Bluetooth device (smartphone, tablet etc.).

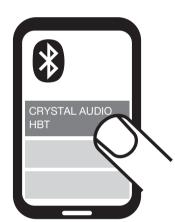



- 1. AUX IN: Connect your external sound source via 3.5mm audio cable.
- 2. USB: Play songs directly from a USB flash drive. Won't charge a device.
- 3. **HEADPHONES:** Connect your headphones.

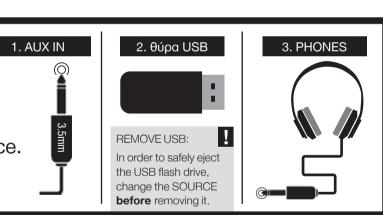



Press **SOURCE** button on the Remote Control or Main Unit to switch between available modes.



Radio Tuning

MANUALLY

RADIO mode: Long press **TUN- / TUN+** on the Remote Control or Main Unit to manually select a radio station.

SAVE


To save the station press **M(PROG/SAVE)** on the Remote Control and choose the desired position by pressing **CH-/CH+**.


Press M(PROG/SAVE) once more to confirm and save.

AUTOMATICALLY

RADIO mode:

Press **SCAN button** on Main Unit to automatically search and save available radio stations.

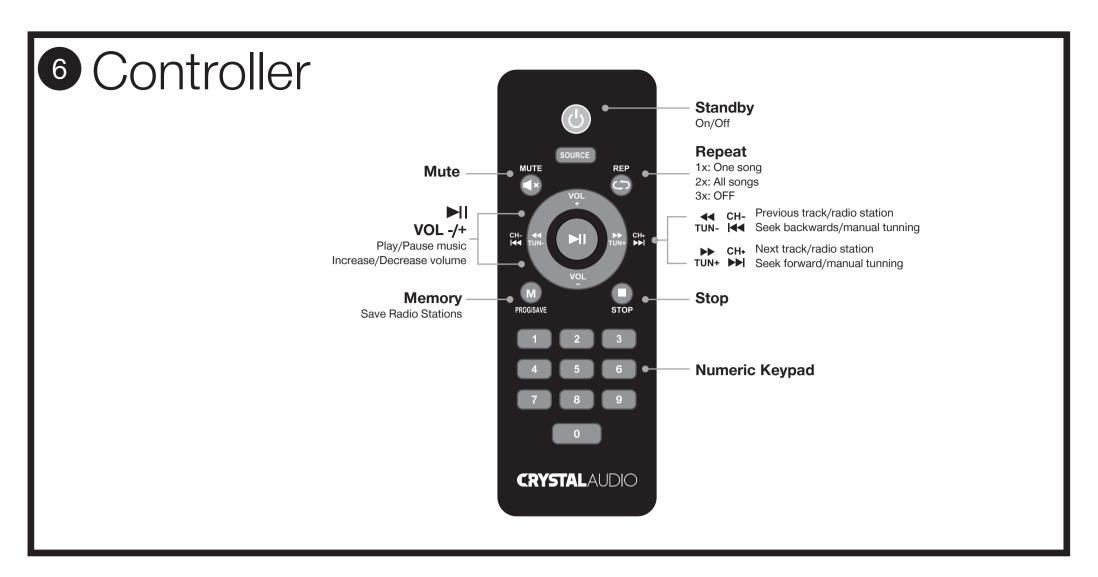

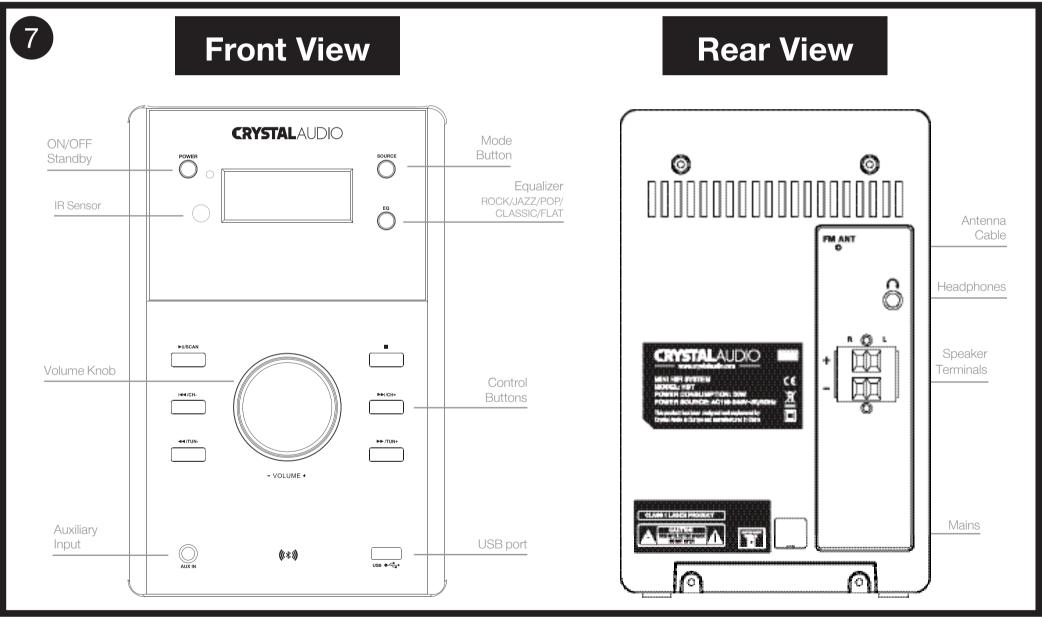

8 Care & Maintenance


Compact discs:

1. Treat disc carefully holding it by its edges.

2. Clean with a soft, dry cloth. Wipe from the center to the outer edge of the disc.

Do not wipe in circular direction.

3. Do not stick or write anything on either side of the disc.

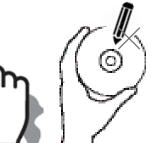

Unit:

1. To prevent shock hazard disconnect from the AC power source when cleaning the device.

2. Clean with a dry cloth.

A dump cloth may be used on the front panel.

